



Arm height

Lumbar

Seat depth

Arm depth, width, and pivot



Arm depth, width, and pivot – Adjust arm pads to the desired position.

Arm height – Push button in and raise or lower arms .


Back lock – (Last lever) Lock seat in upright position. To release, lean forward and pull toward back. To lock, lean forward and push toward front.

Back tension – Turn knob to adjust tension of recline. Forward to increase and backward to decrease.

Lumbar – Grab tabs and slide the support up or down.

Seat depth – Pull handle up, slide seat forward or back.

Seat height – (middle control) To lower, hold handle up while seated. To raise, hold handle up and keep your weight off the chair.

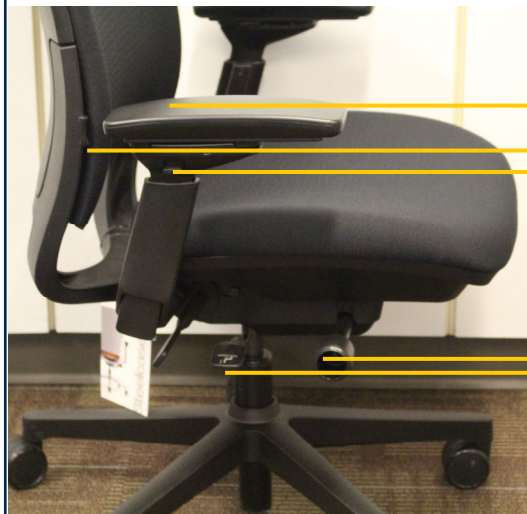

Arm depth, width, and pivot

Lumbar

Arm height

Back tension

Seat height

Back lock



Steelcase - Amia

ISCG Inc.